










### Customised







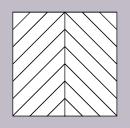



www.gerbur.com





A stunning collection of high-quality floors with the natural beauty and durability of wood and stone flooring, yet with all the practical benefits of Luxury Vinyl Tiles.

Gerbür Wood Grain Luxury Vinyl Tiles : Take a closer look.

We find the inspiration for Design flooring in the beauty of the natural world and feel passionate about bringing this into every product we create. A stunning collection of high quality floors with the natural beauty and durability of wood flooring, yet with all the practical benefits of luxury vinyl tiles.

At Gerbür we design, develop and manufacture high quality Luxury Vinyl Tiles with unique and patented properties using state-of-the-art technologies for both home and commercial usage. No matter wether the project is a commercial, residential or a sports facility installation,

Gerbür Essential LVT will exceed the requirements of even the most demanding areas of traffic. It is a combination of our worldwide expertise, our broad product portfolio as well as our intimate understanding of our customer's needs that enables Gerbür to create those distinctive flooring experiences. Innovative and modern designs at the best possible price vs performance ration.

بلاطات لاكشري فينيل من الخشب المحبب، تفضل بإلقاء نظرة.

إننا نستمد الإبداع والإلهام في تصميم أرضيات مرموقة، من جمال وروعة العالم الطبيعي، ويملؤنا شغف كبير ورغبة جارفة في إظهار ذلك التميز في كل من المنتجات الرائعة التي نبتكرها. مع تشكيلة مذهلة من الأرضيات عالية الجودة التي تتألق بجمال طبيعي ومتانة كاملة التي تميز الارضيات الخشبية، ومع ذلك فإنها تتمتع بكافة الميزات العملية والمواصفات المتفوقة لللاطات لاكشرى فينبل.

إننا في جيربور نقوم بتصميم، وتطوير وتصنيع بلاطات لاكشري فينيل عالية الجودة، التي تتمتع بمواصفات متفردة ومزودة ببراءة اختراع، وذلك باستخدام التكنولوجيا العصرية والحديثة لكلا من الاستخدامات المنزلية والتجارية. فمهما كان المشروع الذي نتولاه تجارياً أم سكنياً مبدعاً أو تركيب منشأة رياضية مرموقة.

فإن بلاطات لاكشري فينيل الأساسية من جيربور ستتجاوز بكل تأكيد متطلبات مناطق الحركة الأكثر نشاطاً وفعالية، لا سيما وأنها تعتبر تركيبة متفوقة من الخبرة العالمية المرموقة، مع نموذج منتجات واسعة النطاق وشديدة التنوع، علاوة على تقهم عميق وكامل لمتطلبات عميلنا، الأمر الذي يتيح الفرصة أمام جيربور لإبداع وتطبيق تلك الخبرة الكبرى في أرضيات متميزة، من خلال الإبداع والتصاميم الحديثة وبالأسعار الأفضل على الإطلاق في مقابل الأداء المتفوق.






### **TECHNICAL SPECIFICATION**


The floor covering selected belongs to the Gerbur Essential Tile family of luxury vinyl tiles (LVT), manufactured from several layers that have been laminated together, and commonly incorporating a printed film design layer. Products are supplied with square edges. Planks should be installed using Gerbur recommended adhesives.


Name	Standard	Symbol	Result
Usage Classification	EN 685 EN ISO 10874		23, 31
Manufacturing Standard	EN 649 EN ISO 10582		Pass
Total Thickness	EN 428 EN ISO 24346	^	2 mm
Wear Layer Thickness	EN 429 EN ISO 24340		0.3 mm
Weight	EN 430 EN ISO 23997		3675 g/m <sup>2</sup>
Abrasion Resistance	EN 649 EN ISO 10582		Group T Type 1
Residual Indentation	EN 433 EN ISO 24343-1		≤0.1 mm
Dimensional Stability	EN 434 EN ISO 23999		≤0.25 %
Curling	EN 434 EN ISO 23999		≤2 mm
Flexibility	EN 435 EN ISO 24344 method A		Pass
Slip Resistance	DIN 51130 EN 13893	OS DS	R9 Class DS
Chemical Resistance	EN 423 EN ISO 26987		Excellent
Light Stability	ISO 105 B02	<b>P</b>	6 or better
Flammability / Smoke Emissions	EN13501-1	B <sub>H</sub> -s1	B <sub>fl</sub> -s1
Castor Chair Resistance	EN 425		pass
Sound Reduction	ISO 140-8		4 dB
Thermal Resistance	EN 12664		0.013 m <sup>2</sup> K/W (underfloor heating suitable)
Electrostatic Performance	ISO 6356 EN 1815	7	≤2 kV
Emissions	DIBt/AgBB AFSSET & labelling		Pass Pass & A+
Surface Treatment			Urethane


#### Customised











www.gerbur.com





### POLAR BARNWOOD

### بولار بارنوود

Not content with being a designer floor with unlimited installation possibilities coupled with extreme durability. Polar Barnwood is also a statement of modernity with it's in-vogue grey colouring.

ليست مجرد تصميم للأرضيات يتمتع بإمكانيات وقدرات تركيب لا حصر لها، مشفوعة بالمتانة التامة، إنها بولار بارنوود تعبير حقيقي وأصيل عن روح العصرية الكاملة بألوانها الرائعة التى تتألق بدرجات وظلال الرمادي الرائعة.









### FRESH VANILLA

### فريش فانيلا

A modern twist on white washed oak flooring. Fresh Vanilla brings clean modern lines and a lifetime residential warranty so you can relax knowing that the floor will stay great looking for decades.

لمسة عصرية على أرضيات خشب السنديان المطلية بلون أبيض أنيق، إنها فريش فانيلا التي تعمل على إضفاء سمات عصرية بارعة، مع ضمان يستمر طوال العمر، وهكذا يمكنكم الاطمئنان لمعرفتكم بأن الأرضية ستظل محافظة على ذلك المظهر الرائع بمرور عشرات السنين.









### **DUSKY OAK**

Product code : JI-GBESS003

Length

Width Thickness

**Box Size** 

Pack

: 914.4mm

: 152.4mm

: 3.34m2

: 24 pcs.

: 2mm / 0.3mm

## داسكي أوك

With it's trendy grey overtones and waterproof features, Dusky Oak brings fashion and to any area of the home or office. 100% environmentally friendly and recyclable.

من خلال ظلال رمادية متناغمة بارعة ومميزات عزل المياه، تساهم داسكي أوك في جلب المزيد من الإبداع والأناقة على منزلكم أو مكتبكم، علاوة على أنها صديقة للبيئة وقابلة للتدوير بنسبة ١٠٠ ٪ .







### SILVER PEPPER

### سیلفر بیبر

Due to it's distressed look, Silver Pepper dominates and defines any floor space. With it's narrow planks and square cut ends, it is a throwback to days and floors of yesteryear.

بسبب من مظهرها الخاص، فإن سيلفر بيبر تهيمن بكل قوة وتسهم بتحديد أي من مساحات الأرضيات، من خلال ألواحها الضيقة ونهاياتها ذات التقطيع المربع، فإنها تحملنا بنقلة عبر الزمن إلى أيام وأرضيات الزمن الماضي.









### نهينسد تشيري ENHANCED CHERRY

A wood species that's been used for furniture and floors for 100's of years, Cherry is a popular and welcoming choice of floor for those seeking warmth and luxury from their interior spaces.

تم استخدام أنواع وأصناف الخشب لصناعة الأثاث والأرضيات منذ مئات السنين، ويشتهر خشب الكرز من بينها بأنه خيار رائع للأرضيات لأولئك الباحضين عن الدفء والرفاهية ضمن المساحات الداخلية لديهم.










### **WASHED CEDAR**

### ووشد سیدار

Having a light coloured floor is normally difficult to maintain and keep clean, Washed Cedar manages both with ease due to our extremely durable patented Diamondshield™ PU coating.

يعتبر الإبقاء على أرضية تتألق بلون فاتح مريح أمراً صعباً عادة بسبب صعوبة الصيانة والتنظيف، إلا أن ووشد سيدار تمكنت من حل تلك المعضلة بكل سهولة وإتقان من خلال طلاء PD ™Diamondshield المتبن إلى أقصى حد والمزود بيراءة اختراء.

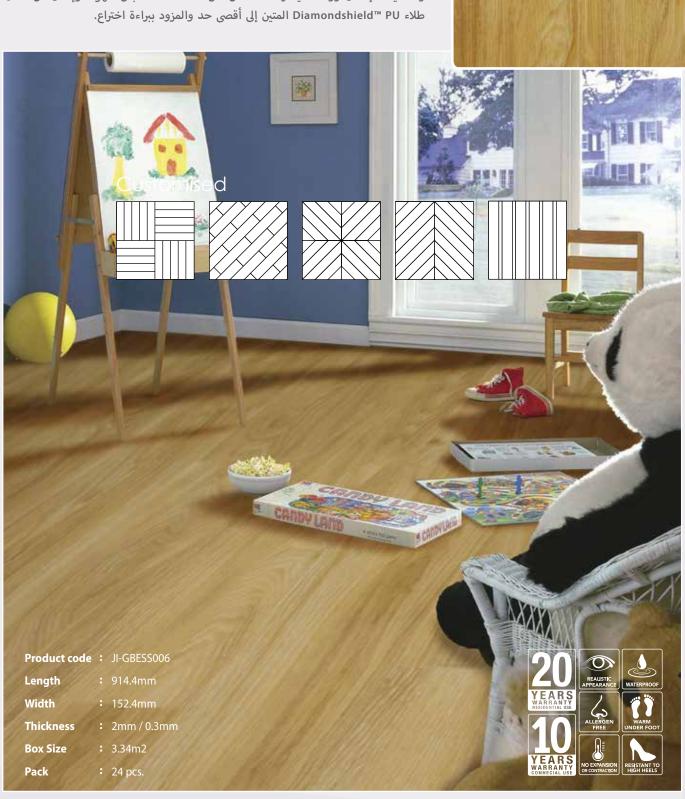





### دستریسد هینا DISTRESSED HENNA

Country barnwood style flooring, Distressed Henna looks fabulous, lasts for decades and because it's 100% waterproof and recyclable, it's also environmentally friendly.

أرضيات رائعة على نمط الطرق الرومانية القديمة، إذ تتألق دستريسد هنا بمظهر خلاب وتستمر لعشرات السنين، ويعود ذلك لمواصفات مقاومة وعزل المياه وقابلية التدوير الكاملة، ناهيك عن أنها صديقة للبيئة.










### **BURNT HAZEL**

### بورنت هيزل

Dark, sultry and very provocative, Burnt Hazel oozes class and sophistication for those that wish to make a statement of who they are and how they define their lifestyle.

تشع بورنت هيزل بلونها الداكن المثير، ومن خلال تألقها الأخاذ، أناقة ورقياً أكيداً لاولئك الراغبين بإظهار ذلك الجانب الراقى من شخصيتهم وأسلوب حياتهم المتميز.

Customisec

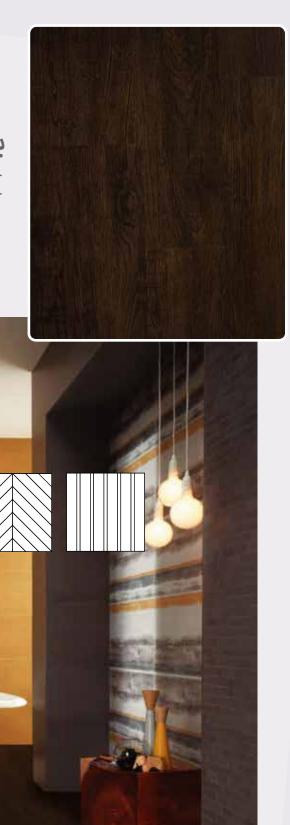

**Product code :** JI-GBESS008

: 914.4mm

**Width** : 152.4mm

Length

Thickness : 2mm / 0.3mm

Box Size : 3.34m2

**Pack** : 24 pcs.





### **TWILIGHT**

### توايلايت

A designer floor with unlimited design options, Twilight not only adds style to any interior but due to it's durability and low maintenance, it's a floor you can install and admire with complete peace of mind.

أرضية مصممة مع مجموعة لا متناهية من خيارات التصميم، إن توايلايت لا تعمل على إضفاء المزيد من الأناقة والأسلوب الراقي لأي من الأقسام الداخلية فحسب، بل بسبب من متانتها الفائقة وتكلفة صيانتها القليلة، إنها أرضية تمنح سهولة التركيب وراحة البال الدائمة.

Customised

**Product code :** JI-GBESS009

: 914.4mm

: 152.4mm : 2mm / 0.3mm

: 3.34m2

: 24 pcs.

Length

Width

Pack

Thickness Box Size







### **MIDNIGHT OAK**

# ميد نايت أوك

As close as you would want to get to black, Midnight Oak is a floor that seamlessly blends into the background and let's the furniture and fixtures become the highlight of the room.

اللون الأقرب للأسود القاتم، إنها ميدنايت أوك، أرضية تتماهى بكل دقة وسلاسة لتصنع خلفية أكثر من رائعة و تتيح فرصة مثيرة لأن يكون الأثاث والثوابت كمركز للاهتمام في الغرفة.





### Installation Guidelines

#### INTRODUCTION

Installing Gerbür is straightforward and follows the same guidelines that apply to all quality resilient tile floors. Good preparation is essential as the finished appearance of the floor will only be as good as the quality of the base and preparation over which it is installed. The base should be hard, smooth, clean and dry and free from defects. The surfaces should be even in order to achieve good fitting and adhesion. Any irregularities in the sub-floor will show through the finished floor.

The guidance notes provided by Gerbür are intended to give general information on the methods that can be used to prepare various subfloor types.

#### **SURVEYING**

Suitability of sub-floors and site conditions must be assessed prior to beginning an installation to ensure that they are in accordance with Gerbür and sub-floor manufacturers' guidelines and national standards. Gerbür products are not suitable for external installation or unheated locations.

#### PREPARATION OF SURFACE

The quality and preparation of sub-floors, testing for moisture content and relative humidity, and installation procedures must be in accordance with Gerbür technical guidelines and BS 8201, BS 8203 and BS 8204.

#### INSTALLATION OF MATERIAL

Handle, store and acclimatise product according to Gerbür recommendations. Installation must not begin until all other trades have been completed.

The appropriate adhesive is required for all installations involving Gerbür products. Adhesive selection should be made according to the specific site conditions.

#### RECEIVING MATERIALS, CONDITIONING & STORAGE

Before laying flooring, all materials must be checked to ensure that the batches are identical and free from defects. Complaints with regard to clearly identifiable defects cannot be accepted once the flooring has been laid.

Boxes of tiles should be removed from pallets and separated from one another as part of the acclimatisation process.

Ensure that the heating/air conditioning is fitted and operating. Alternatively, temporary heating or cooling may be used to maintain a constant temperature within the specified range.

Tiles, adhesive and sub-floor must be allowed to stabilise to a constant temperature between 18°C-27°C for a period of at least 24 hours before, during and after installation. If tiles and adhesive have been stored outside of this temperature range, then it is recommended that acclimatisation between 18°C-27°C is increased to 48 hours. Tiles must be stored flat and kept away from direct sunlight, heaters or air vents for proper conditioning.

#### MOISTURE IN SUB-FLOORS

Moisture testing of all sub-floors is essential before installation can begin. This is true of new and old buildings. Moisture testing must be carried out and recorded. All moisture tests must be undertaken in accordance with BS 8203 and using an appropriate method to suit the sub-floor type.

The sub-floor may be considered dry when the relative humidity is 75% or below. If readings are above this level, a surface damp proof membrane can be applied. Consult manufacturers for instructions. Alternatively subfloors can be given sufficient time to dry.

#### PREPARING A SUB-FLOOR TO RECEIVE TILES

#### 1. SOLID SUB-FLOORS

#### **Concrete/Sand and Cement**

Tiles must only be installed on suitably dry concrete or sand and cement sub-floors. Drying time will depend on several conditions, including thickness of slab, location, type of construction, temperature and humidity. New concrete bases contain a high percentage of residual moisture.

Sub-floors must be thoroughly mechanically cleaned of all paint, curing agents, grease, wax and any other foreign matter. The use of solvents to remove surface contaminants is not permitted.

The floor must be hard, smooth, level and free from cracks. Use a suitable repair compound to fill grooves, cracks, holes and depressions. A levelling compound should be applied. Please refer to section titled Levelling Compounds for Solid Sub-floors.

#### **Power Floated Concrete**

Power floated concrete has a relatively non-absorbent, low porosity surface which will increase the drying time. It is not a suitable surface for direct application of adhesive. Surface laitance may also be produced by the power floating procedure. For these reasons, it is recommended that an appropriate method of mechanical preparation such as shot blasting or scarifying is used to prepare the surface.

A levelling compound should be applied. Please refer to section titled Levelling Compounds for Solid Sub-floors.

#### **Anhydrite**

Anhydrite screeds can be difficult to identify and can be mistaken for the more traditional cement based products.

Provided ambient conditions are acceptable, anhydrite screeds dry at a similar rate to their cement-based counterparts. In the case of the floor screed not being sufficiently dry please consult the manufacturer on how to proceed, in most cases the screed should be allowed to dry out to an acceptable level.

When the floor is sufficiently dry a levelling compound should be applied. Please refer to section titled Levelling Compounds for Solid Sub-floors.

#### **Asphalt**

Mastic asphalt is normally applied between 15 and 20mm thickness and sets to a dense hard mass which is impermeable to moisture and therefore forms an efficient damp-proof membrane. Mastic asphalt is often applied over an existing concrete base which lacks a conventional DPM. If the asphalt is cracked or damaged it will need to be repaired and damp proofing may be required.

The asphalt will need to be cleaned before a levelling compound is applied. Please refer to section titled Levelling Compounds for Solid Sub-floors.

#### **Levelling Compounds for Solid Sub-floors**

Most solid sub-floors will require an application of a levelling compound to provide a hard, smooth and level surface to which adhesive and tiles can be applied.

The selection of a suitable levelling compound is critical in determining the long term durability and appearance of the flooring system. Generally levelling compounds should be applied at a minimum of 3mm thickness. The manufacturer of this compound can supply details of the product within their range that should be used to suit the end use application together with details of which primer should be used.

#### **Expansion Joints**

Expansion joints are incorporated into concrete floor slabs in order to permit movement without causing cracks to form. These joints should not be filled with smoothing compound or overlaid with Gerbür floor coverings. In all cases they should be mirrored through to the surface.



#### 2. TIMBER FLOORS

#### **Existing Floorboards**

Loose floor boards should be firmly nailed down and any damaged boards replaced. If necessary, the boards should be planed and/or levelled with a suitable levelling compound prior to covering with plywood. See section on Plywood Overlays.

Wood sub-floors that exhibit excessive deflection, or are "springy" or "give" when walked on are not suitable for installing Gerbür unless suitable remedial work is carried out.

#### Chipboard, Hardboard, Particleboard

Tiles should not be adhered directly to such sub-floors whether they are free floating or fixed, and floors should always be overlaid with plywood prior to installation of tiles. See section on Plywood Overlays.

#### **Wood Block Floors**

Existing wood block floors laid onto a concrete base are unsatisfactory as an underlayment for resilient floors, even when plywood has been fitted. Such floors must be lifted and the sub-floor levelled.

#### **Plywood Overlays**

Plywood should be a minumum of 6 mm thickness Class 3 exterior grade, glue bond EN 314-2:1993. The thickness selected should be determined by the quality of the surface being covered.

Panels should be acclimatised to the site conditions as recommended by the supplier. Plywood should be protected against damage or water prior to application.

The plywood should be laid in sheet sizes not exceeding 2400 x 1200 mm, and fixed using screws, twisted shank or ring shank nails, serrated or divergent staples. Fixing should start at the centre of each sheet — nailing, screwing or stapling at 150 mm intervals at intermediate centres and at 100 mm centres along the perimeters with the fixing line 12 mm from the edge. All fixings should be finished flush with the surface.

Joint lines should be staggered, and every effort made to prevent coincidence of joints in the sheets and the timber base.

We would recommend the use of a suitable compound to ensure the joints of the plywood and all fixings are not visible when the installation is complete. The manufacturer of this compound can supply details of the product within their range that should be used to suit the end use application together with details of which primer should be used.

#### Floating Installation

#### Step 1 - Pre-install Activities

- Ensure that the width of first and last row is not less than 50 mm wide. Measure the distance of room in the direction of the width of the plank. Divide the distance by the width of the plank. Multiply the number beyond the decimal point of the by the width of the plank. This is the width of the last plank. If it is less than 50mm, you must cut the first plank. Determine the width of the first and the last row by adding the calculated width of the last plank to the width of a whole plank. Divide this number by two. Subtract the expansion gap from the result. The result is the width of the first and last row.
- Rack up planks from several boxes.
- Ensure that end joints are staggered at least 300mm between the rows.
- Inspect

#### Step 2

- Cut off the unsupported tongue of the first row so that a clean, solid edge is towards the wall.
- If the first row of floor panels had already been trimmed in width to meet minimum requirement, there is no need to trim it again.

#### **OTHER SUB-FLOOR TYPES**

#### **Existing Resilient Floors**

It is recommended that Gerbür are not directly applied over existing resilient floors. Generally, the old flooring should be removed and as much of the old adhesive scraped away by hand or using an appropriate mechanical method. Under no circumstances should solvents be used. NB: Some resilient tiles and adhesives can contain asbestos. In case of doubt, contact the relevant local authority for advice on their removal and disposal.

#### **Terrazzo, Stone, Quarry tiles**

Some existing flooring materials such as quarry tiles, ceramic or terrazzo may be suitable for the installation of Gerbür if properly prepared. These bases may be sufficiently porous to allow moisture to pass through to the back of the tile, and must be checked for moisture and damp-proofed if necessary. Worn and damaged areas must be repaired, including any tiles that are insecure, which must be removed.

The surface must be thoroughly cleaned of all sealants and varnishes, as well as foreign matter such as oil, grease, wax, etc. It is recommended that a suitable mechanical method is used to prepare the surface, as this will also provide a satisfactory surface to accept a levelling compound. Please refer to section titled Levelling Compounds for Solid Sub-floors.

#### Meta

#### **Indirect Application**

The metal surface should be cleaned/degreased and then prepared by grinding or scarifying to ensure that it is clean and free from any contamination, such as rust or metal oxide. It should then be mechanically abraded to give a surface key.

A suitable primer should be applied to the metal surface prior to putting down a suitable levelling compound, which must be applied as recommended by the manufacturer.

#### **Raised Access Floors**

Gerbür cannot be fitted directly to raised floor panels. Where this is required, the panels should be level and stable, and then overlaid with plywood, using appropriate fixings to suit the panels surface - see section on Plywood Overlays.

Note that Gerbür Access has been specifically developed for fitting directly onto raised access floor panels.

#### Step 8

- Using gentle force and at an angle, you gradually, from left to right, push the long side tongue into the locking groove of the previous row.
- You may need to lift the floor panel to the left of it slightly to allow for the 'sliding action'.
- Complete the whole row in the same way.







#### Step 3

- Install the product from left to right, across the room.
- Place the floor panel with the locking groove facing the room.
- Ensure there is expansion gaps. Between floorand the wall and all vertical fixtures during installation.



#### Step 4

- Place the short side tongue of the next floor panel at an angle into the short side groove of the first one and fold down.
- Continue with the next floor panels in the same way.



#### Step 5

- Place the final floor panel face up, locking groove long side towards the wall, and the short end tongue posi-tioned 5mm to 8mm from the wall.
- Mark the place where the floor panel is to be cut.
- Make a cut in the floor panel on the decor side with a utility knife. Use the snap method to break the unneeded part off.



#### Step 6

- Stagger the end joints between rows at a minimum 300 mm.
- If you can, use the cut piece of floor panel from the previous row. If not suitable, take a new floor panel and cut it in half.
- Place the floor panel at a low angle and insert the long side tongue into the locking groove of the floor panel in the previous row.
- Fold the floor panel gently down.



#### Step 7

- Place the short end tongue of the next floor panel at an angle against the previously installed floor panel and fold gently down.
- Ensure that the long side tongue is positioned on the locking strip of the previous row.




#### Note:

#### Expansion gaps around pipes.

 Measure the diameter of the pipes and mark the position on the floorboard. There should be a 5mm to 8mm expansion gaps between the floor panel and the pipe or other vertical structures.





#### Door frames may have to be undercut.

- Use a floor panel as a guide as to how much to saw.
- Put the floor panel faced down as a guide.
- Saw off the bottom of the door frame to allow the floor panel to slide under it.

#### Glue Down Installation

#### **Installation Overview**

- The main difference between floating and glue down method is the additional spreading of the glue on the subfloor.
- Do not spread glue on more area than you can work with.
- An area the size of two installed rows is a good starting area.
- The steps described in the floating installation are the same for glue down installation.
- Always follow adhesive manufacturer's instruction.

#### **IInstallation Procedure**

- Spread the glue width of two initial starter rows.
- Install the first row of planks.
- Install the second row. Ensure you are locking the edges.
- · Spread another section of glue.
- Install another two rows.
- Repeat spreading glue/install planks cycle until all flooring has been installed.



# Essential

100% WATERPROOF

WATERPROOF

100%ضد الماء

**DURABLE AND LOW MAINTENANCE** 

RESISTANT TO HIGH HEELS

متانة وقلة الحاجة للصيانة

**REALISTIC APPEARANCE** 



مظهر واقعي

WARM AND QUIET UNDERFOOT



دافئ وهادئ تحت الاقدام

NON SLIP



لا يسبب الانزلاق

HYGIENIC AND NON ALLERGIC



صحي و لا يسبب الحساسية





صديق للبيئة %100 قابل لاعادة التدوير





أكثر فعالة من حيث التكلفة

#### **Exclusive Distributor**

الصور هي لأغراض الإيضاح فقط

Images are for illustration purposes only.

تلك جيربور حقوق النشر والحماية لكافة التصاميم

Gerbür owns copyright and protection on all designs.

E : info@gerbur.com
W : www.gerbur.com





### **TECHNICAL SPECIFICATION**

The floor covering selected belongs to the Gerbür Essential Tile family of luxury vinyl tiles (LVT), manufactured from several layers that have been laminated together, and commonly incorporating a printed film design layer. Products are supplied with square edges. Planks should be installed using Gerbür recommended adhesives.

Name	Standard	Symbol	Result
Usage Classification	EN 685 EN ISO 10874		23, 31
Manufacturing Standard	EN 649 EN ISO 10582		Pass
Total Thickness	EN 428 EN ISO 24346	<u> </u>	2 mm
Wear Layer Thickness	EN 429 EN ISO 24340		0.3 mm
Weight	EN 430 EN ISO 23997		3675 g/m <sup>2</sup>
Abrasion Resistance	EN 649 EN ISO 10582		Group T Type 1
Residual Indentation	EN 433 EN ISO 24343-1	Ty-	≤0.1 mm
Dimensional Stability	EN 434 EN ISO 23999		≤0.25 %
Curling	EN 434 EN ISO 23999		≤2 mm
Flexibility	EN 435 EN ISO 24344 method A	5	Pass
Slip Resistance	DIN 51130 EN 13893	The state of the s	R9 Class DS
Chemical Resistance	EN 423 EN ISO 26987	<b>(5)</b>	Excellent
Light Stability	ISO 105 B02	<b>F</b>	6 or better
Flammability / Smoke Emissions	EN13501-1	B <sub>Irs1</sub>	B <sub>ri</sub> -s1
Castor Chair Resistance	EN 425		pass
Sound Reduction	ISO 140-8		4 dB
Thermal Resistance	EN 12664		0.013 m <sup>2</sup> K/W (underfloor heating suitable)
Electrostatic Performance	ISO 6356 EN 1815	<b>1</b>	≤2 kV
Emissions	DIBt/AgBB AFSSET & labelling		Pass Pass & A+
Surface Treatment			Urethane







